

User Manual

Intel LGA1156 (i3 / i5) - Igloo 1050 Series

Igloo 1050 Series (Fan with 1B1S Bearing)

Igloo 1050 (E) Series (Fan with Entering Bearing)

Igloo 1050 (2B) Series (Fan with Two-Ball Bearing)




Inspiring Cooling Technology
www.GlacialTech.com

•Installation





Step 1
Remove the plastic cover.

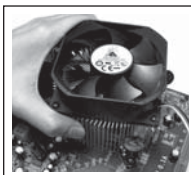

Step 2
Place the fasteners at the motherboard's holes.




Step 3 (Error!)
Make sure that all the fasteners are at the original status.

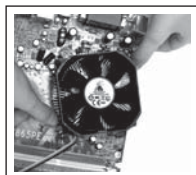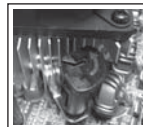

Step 4
Push down on the top of fasteners, you should hear a "click" when pushing down the fastener.



(Error!)
Do not put hands on the top of fan as the pressing point by installation in order to avoid fan hub damage.

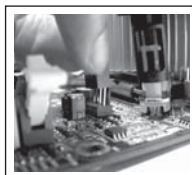

Step 5
Connect the fan cable connector to the motherboard CPU fan header.

- FAN APPROVED BY CE & TUV & UL
- The specifications are subject to change without notice. All brand names and trademarks are the properties of their respective owners.

For further information, please consult our website: www.GlacialTech.com

© 2009 GlacialTech Inc. All rights reserved.

•Specifications

Model	Igloo 1050 Light / (E) / (2B)	Igloo 1050 / (E) / (2B)	Igloo 1050 PWM / (E) / (2B)	
Socket Type	LGA1156 (i3 / i5)			
Cooler Dimension (mm)	Ø95 x 57			
Cooler Weight (gram)	310			
Fan	Rated Voltage	DC 12 V		
	Type	1B1S / (Entering Bearing) / (Two-Ball Bearing)		
	Dimension (mm)	80 x 80 x 25		
	Speed (RPM)	2,600 (±10%)	3,200 (±10%)	800 (±300 rpm) ~ 3,600 (±10%)
	Airflow (CFM)	35.5 (±10%)	44.1 (±10%)	50.08 (Max.)
	Noise (dBA)	25	32	15 ~ 38
Interface Material	High Efficiency Thermal Compound			