
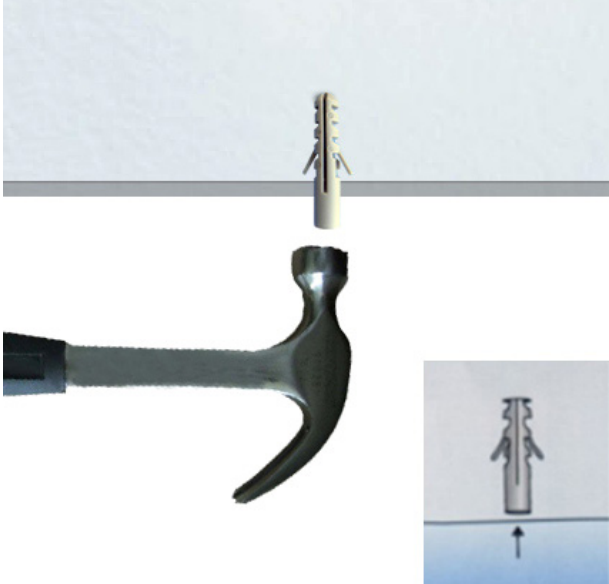


Installation Instructions for Panel Light Suspension Cables


Photograph	Description
	<p>1. Use the Power Drill to make a $\Phi 7 \times 40$mm hole in the ceiling.</p>
	<p>2. Gently use the hammer to fit screw holder into the hole drilled.</p>




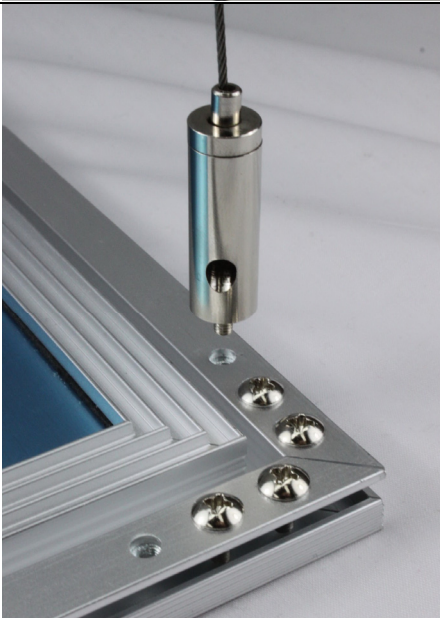

3. One panel light calls for four suspension cables.




4. Unscrew the suspension cables from their anchors.

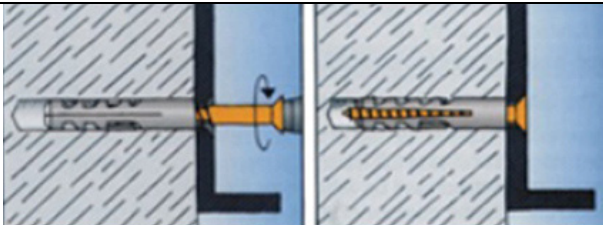


5. Use the M5 screws to fix the suspension cables holder and the screw holder together.


			<p>6. Screw the anchors to the suspension cables.</p>
			<p>7. Attach the other ends of the suspension cables to the panel light.</p>
			<p>8. Tighten up the cable heads onto the panel light.</p>

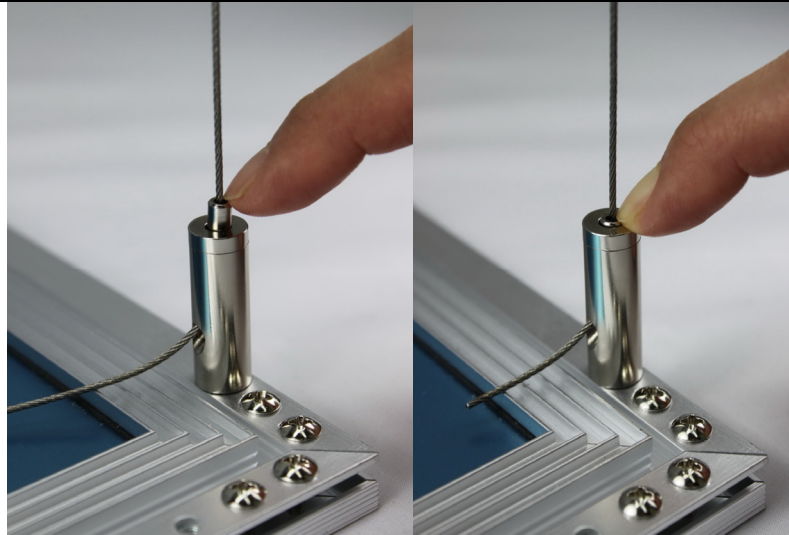

9. Adjust the cable length by pressing down on the cable button. When released, the cable will automatically lock at the desired length.

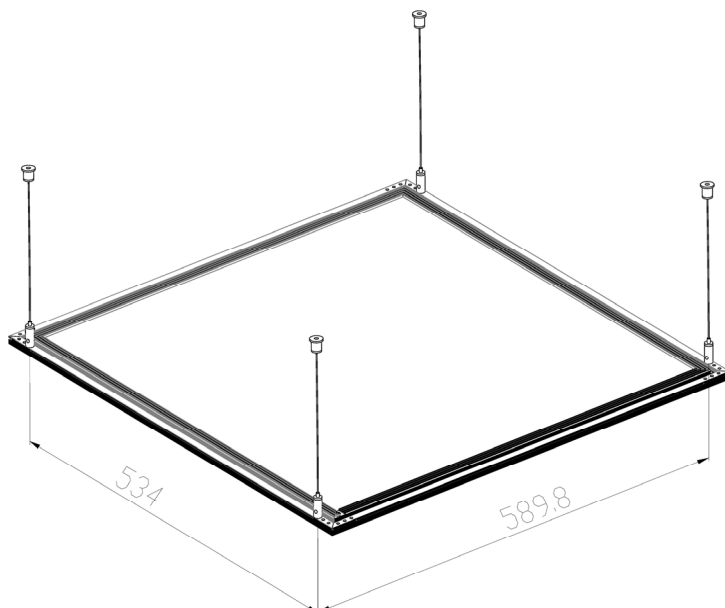

10. A reference drawing of the cable installation for a 600×600-sized panel light

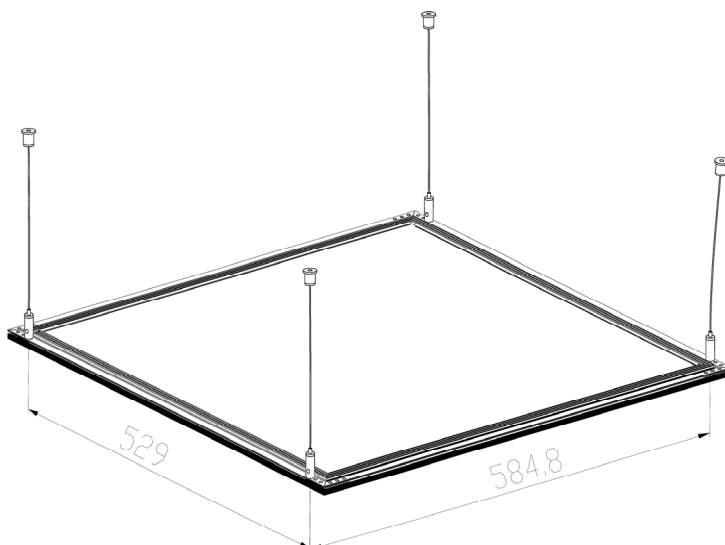

11. A reference drawing of the cable installation for a 595×595-sized panel light